

## SERVICE

### 555B, 555BM, AND 555BMP TELEPHONE SETS

### CONNECTIONS

#### 1. GENERAL

1.01 This section contains information on the 555B (MD), 555BM (MD), and 555BMP telephone sets.

#### 1.02 Reissued to:

- Show 555B and 555BM telephone sets MD
- Update connection information, Fig. 1, 2, and 3.

#### NOTICE

Not for use or disclosure outside the  
Bell System except under written agreement

Printed in U.S.A.

Page 1


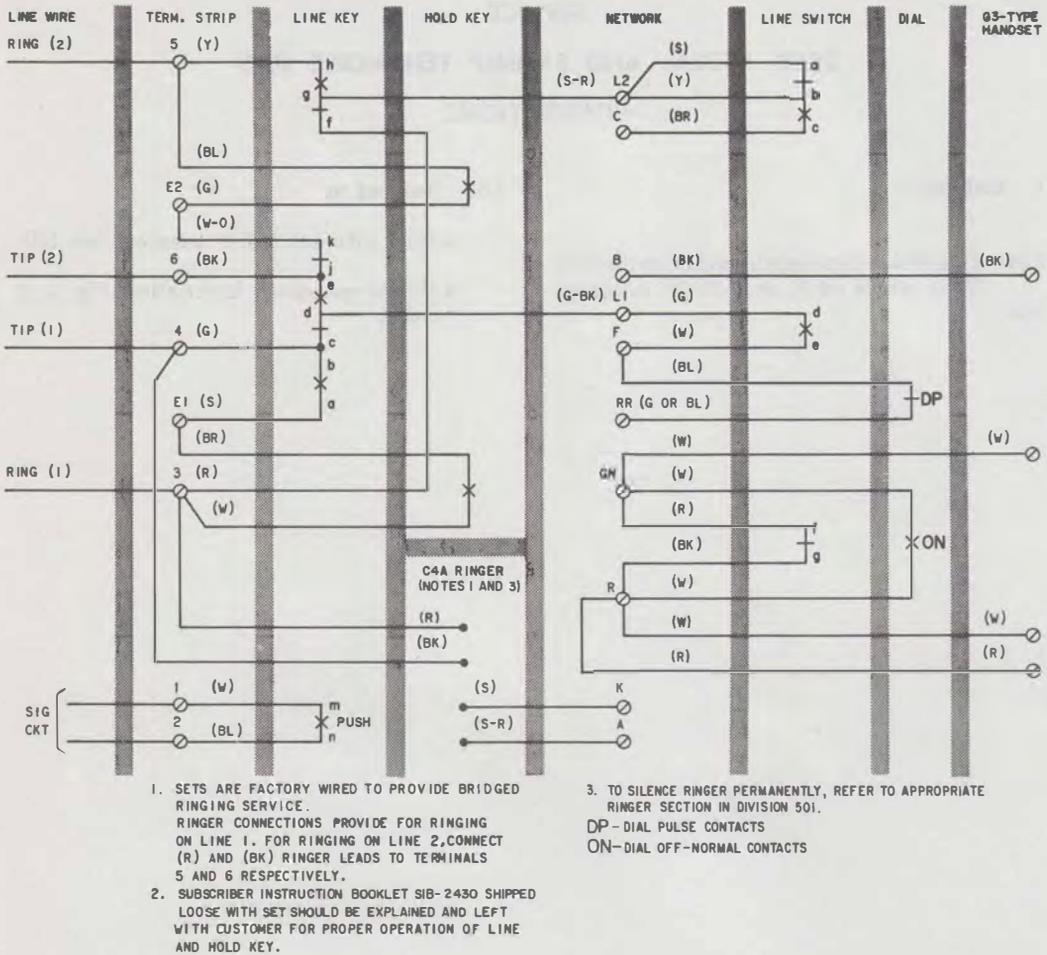



Fig. 1—555B (MD) Telephone Set, Connections

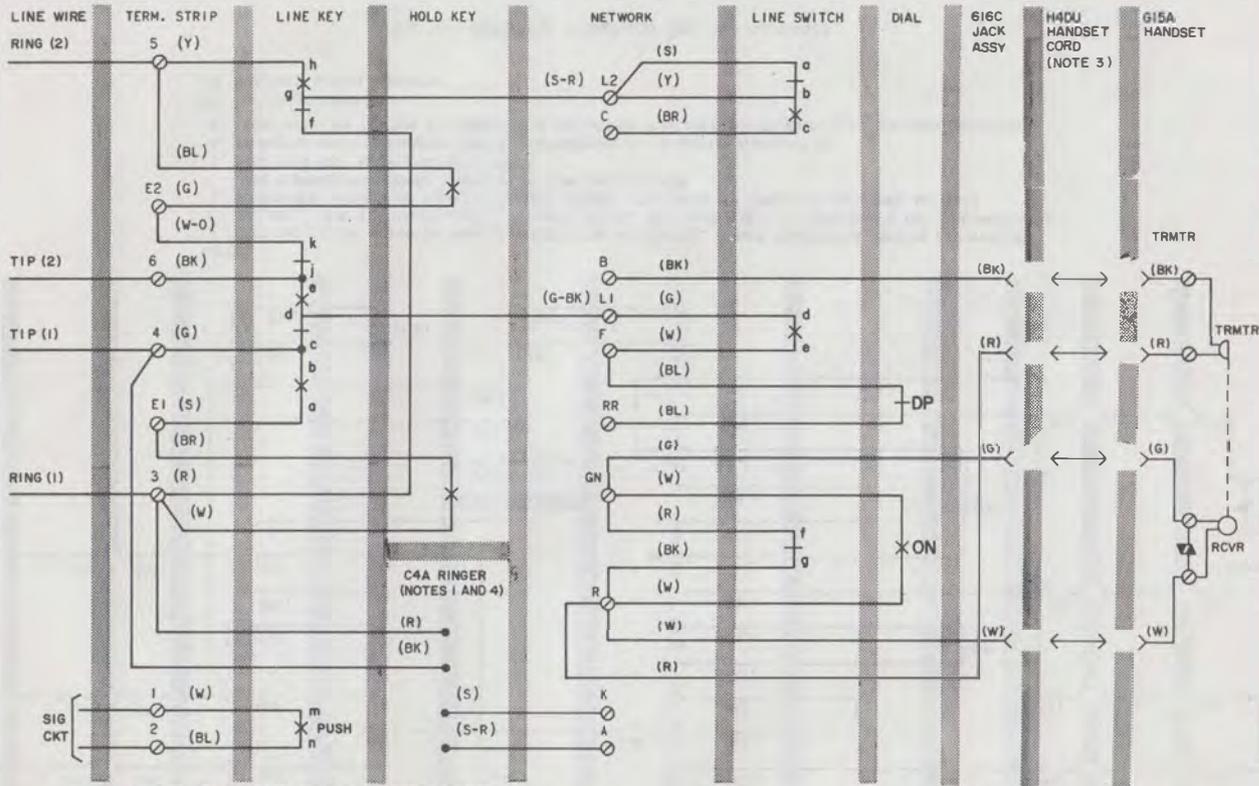

- SETS ARE FACTORY WIRED TO PROVIDE BRIDGED RINGING SERVICE. RINGER CONNECTIONS PROVIDE FOR RINGING ON LINE 1. FOR RINGING ON LINE 2, CONNECT (R) AND (BK) RINGER LEADS TO TERMINALS 5 AND 6 RESPECTIVELY.
- SUBSCRIBER INSTRUCTION BOOKLET SIB-2430 SHIPPED LOOSE WITH SET SHOULD BE EXPLAINED AND LEFT WITH CUSTOMER FOR PROPER OPERATION OF LINE AND HOLD KEY.

- H40U CORD MUST BE ORDERED SEPARATELY.
  - TO SILENCE RINGER PERMANENTLY, REFER TO APPROPRIATE RINGER SECTION IN DIVISION 501.
- DP—DIAL PULSE CONTACTS  
ON—DIAL OFF-NORMAL CONTACTS

Fig. 2—555BM (MD) Telephone Set, Connections

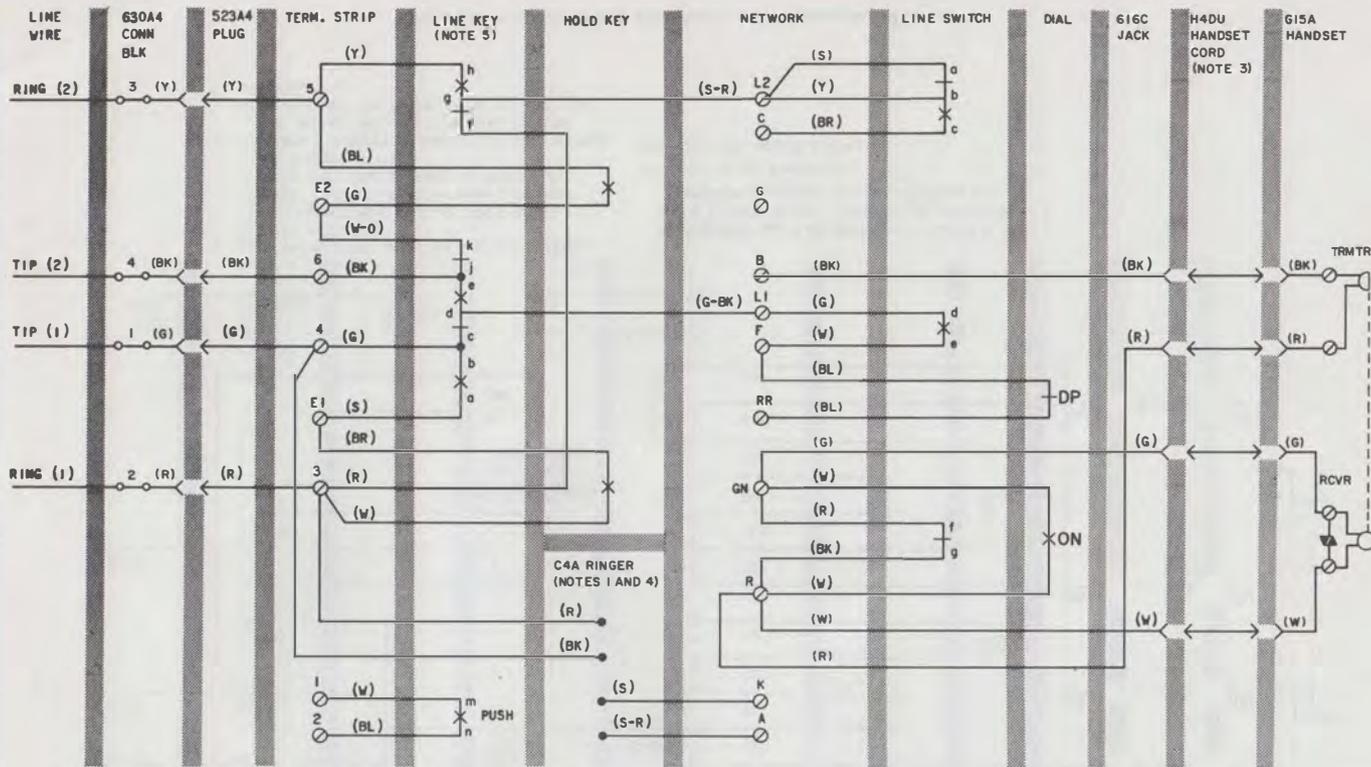

NOTES:

1. SETS ARE FACTORY WIRED TO PROVIDE BRIDGED RINGING SERVICE. RINGER CONNECTIONS PROVIDE FOR RINGING ON LINE 1. FOR RINGING ON LINE 2, CONNECT (R) AND (BK) RINGER LEAD TO TERMINALS 5 AND 6 RESPECTIVELY.
2. SUBSCRIBER INSTRUCTION BOOKLET SJ8-2430 SHIPPED LOOSE WITH SET SHOULD BE EXPLAINED AND LEFT WITH CUSTOMER FOR PROPER OPERATION OF LINE AND HOLD KEY.
3. H4DU CORD MUST BE ORDERED SEPARATELY.
4. TO SILENCE RINGER PERMANENTLY, REFER TO APPROPRIATE RINGER SECTION IN DIVISION 501.
5. LOCAL SIGNALING THROUGH m-n CONTACTS OF LINE KEY NOT AVAILABLE DUE TO INSUFFICIENT LINE WIRE CODUCTORS.

DP DIAL PULSE CONTACTS.

ON DIAL OFF - NORMAL CONTACTS

Fig. 3—555BMP Telephone Set, Connections